

LUNA SHOWER RAINFALL MASSAGE SHOWER PANEL



BEFORE YOU BEGIN

Before you begin, please read the installation instructions below. Observe all local building and safety codes.

Unpack and inspect the items for any shipping damages. If you find damages, do not install.

Please note all products must be installed by a professional and certified plumber otherwise warranty might be voided.

POSSIBLE TOOLS REQUIRED*



Plumbers Tape



Tape Measure



Level



Adjustable Wrench



Hex Wrench



Thread Sealant



Drill



Pencil or Marker



Screwdriver

*not included


Installation (Setup)

Step A

Important Before drilling any holes for the shower panel brackets, ensure there are no hidden cables or pipelines aligned with the desired drilling position.


Step A Drill the two holes for the top bracket 1" apart at the desired height.

Step A.2 Drill the two holes for the bottom bracket 1" apart at approximately 30" below the top bracket.

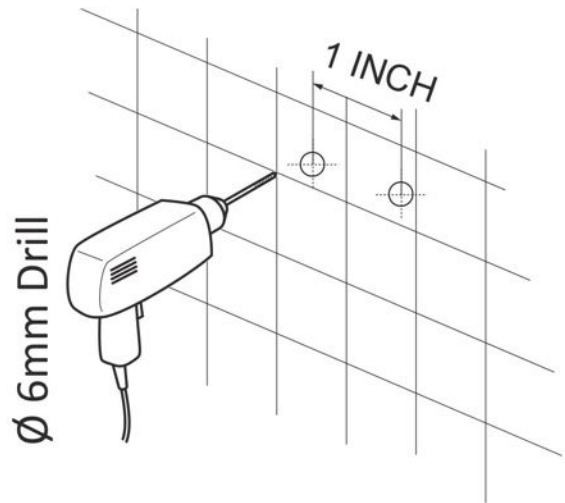


Step B

Insert the wall anchors into the pre-drilled holes as shown in Figure B.

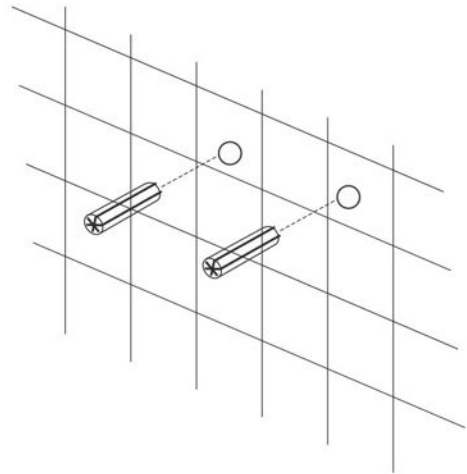


Step C

Place the shower panel brackets aligned with the drilled holes and using a Philips screwdriver tighten the screws to secure the brackets.

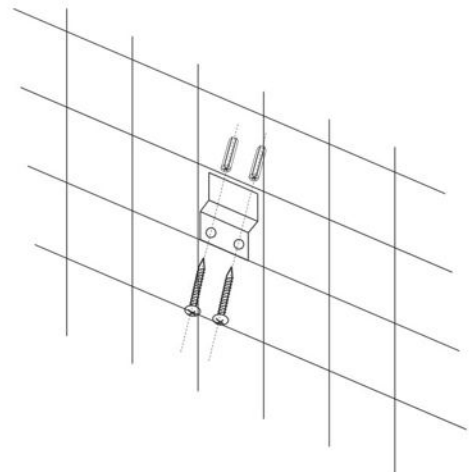

Installation (Handshower)

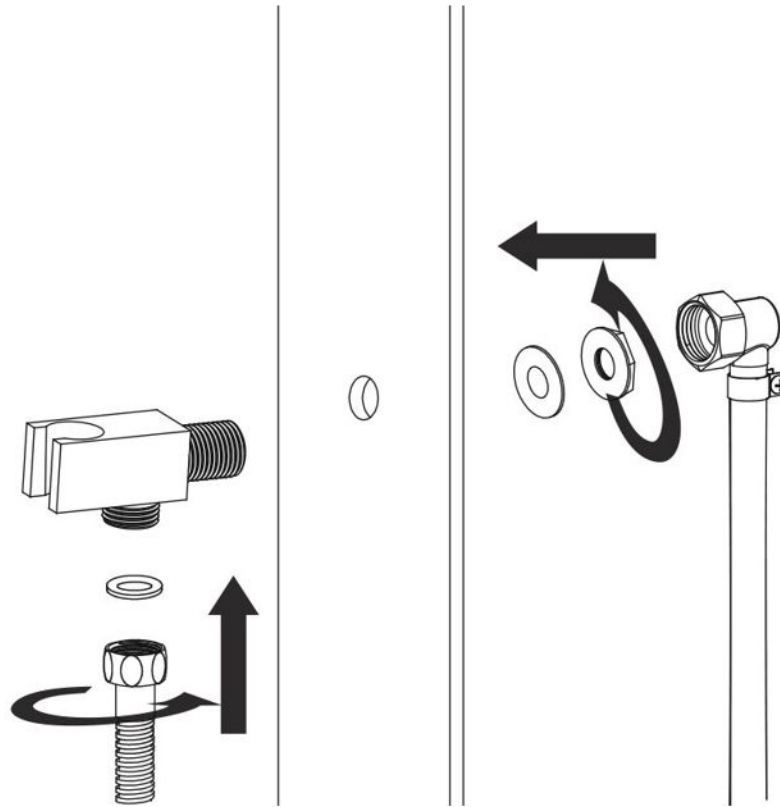

Step 1 Insert the shower wand holder through the pre-drilled hole on the shower panel.


Step 2 Install the water supply hose for the shower wand onto the holder, as shown.

Step 3 Make sure all O-rings are inserted to prevent leakage.

Step 4 Once the shower panel is fully installed and hung on the bracket, you can install the shower wand hose to the holder connection.

Step 5 Finally, install the shower wand to the hose.

Installation (Shower head)

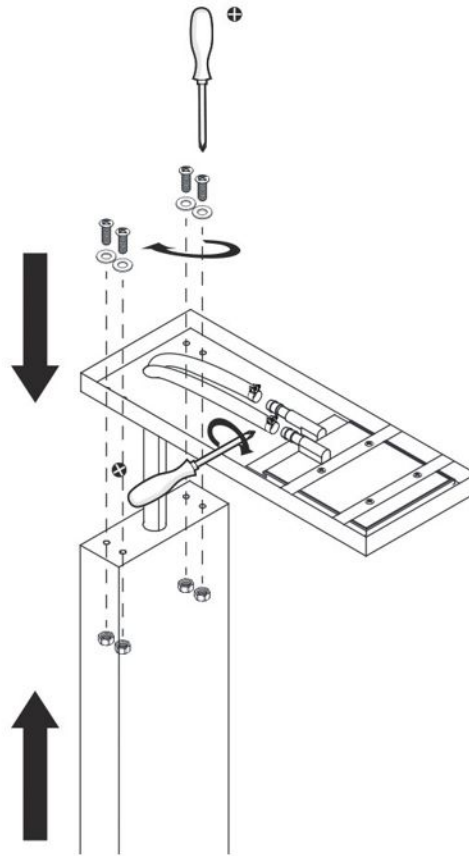


Step 1 Place and align the top shower panel with the pre-drilled holes on the top side of the wall mounted panel.

Step 2 Using the screws and washers provided, secure the top panel with the wall mounted panel.

Step 3 Once the top panel is set in place you can continue with the wall mounting process.

Installation (Wall Mount)

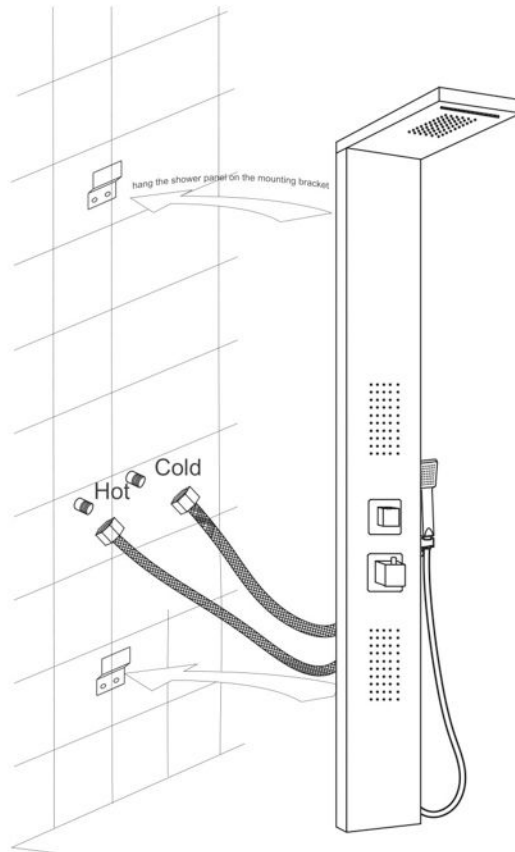

Step 1 Screw the cold and hot water hose from the shower panel to the supply lines in the wall.

Step 2 Carefully hang the shower panel on the secured mounting brackets as shown.

Care and Maintenance

It is recommended to use regular soap and hot water along with a non-abrasive cloth or sponge to regularly clean the product. This avoids any nasty build up or deposits which would be tougher to remove.

If you feel the use of stronger cleaning solutions or chemicals is necessary always test the cleaning solution or chemical on an inconspicuous area before applying to the entire surface.

Wipe all surfaces clean and rinse completely with water immediately after applying cleaner.

Rinse and dry any overspray that lands on nearby surfaces.

DO NOT ALLOW THE CLEANER TO SOAK.