

BATHSELECT SÉNART BRUSHED NICKEL WALL MOUNT THERMOSTATIC MIXER SHOWER SET INSTALLATION INSTRUCTIONS




BEFORE YOU BEGIN

Before you begin, please read the installation instructions below. Observe all local building and safety codes.

Unpack and inspect the items for any shipping damages. If you find damages, do not install.

Please note all products must be installed by a professional and certified plumber otherwise warranty might be voided.


POSSIBLE TOOLS REQUIRED*

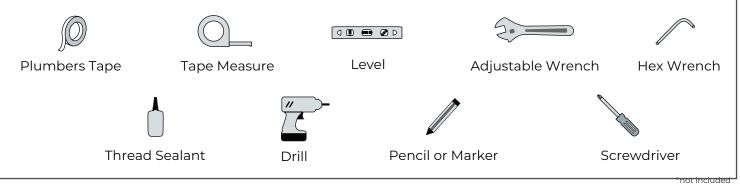





Wall Mount Shower Installations Instructions

Step 1:

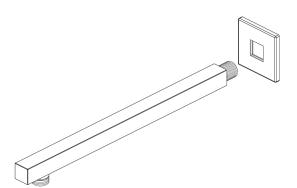


Step 2:

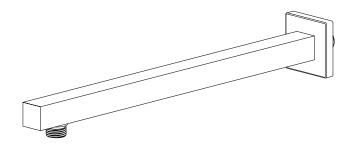


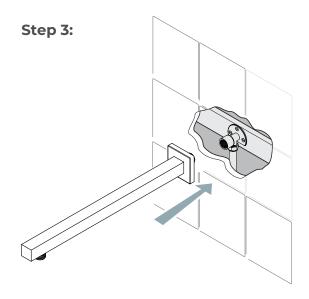


Step 4:

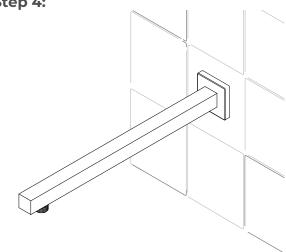


Step 5:

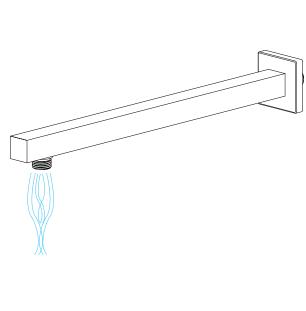

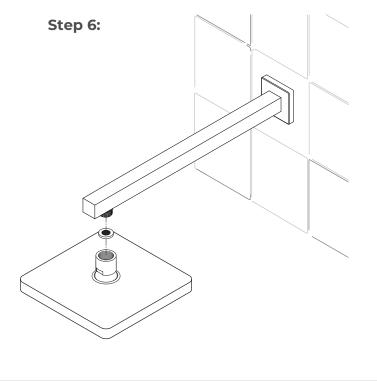



Step 7:

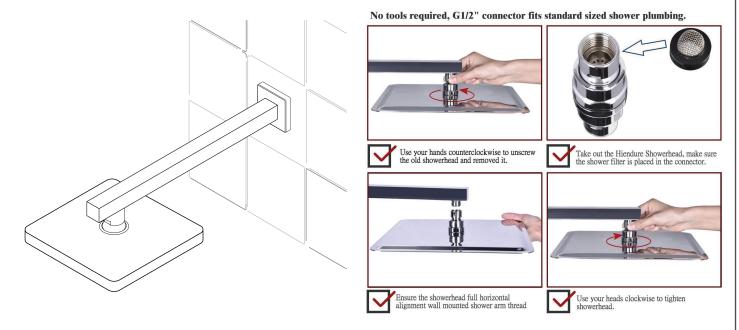


- 1. Apply plumber's tape to the threads on both ends of the shower arm and slide on the decorative escutcheon.
- 2. Insert the new arm into the fitting in the Wall and twist to tighten. Finish tightening with your adjustable wrench. Wrap a dry cloth around the shower arm to protect the finish while tightening with adjustable wrench.
- 3. Thread the new shower head onto the arm and hand-tighten. Hold the shower arm in place with groove joint pliers and finish tightening the shower head with your adjustable wrench. Wrap both in a dry cloth to protect the finish.
- 4. Before securing the decorative escutcheon, turn on the water supply to make sure that all connections are tight and there is no leaking. If no leaks are detected, continue with the installation. If leakage does occur, use your adjustable wrench to tighten the connections as necessary.
- 5. Apply a bead if silicone sealant to the back of the escutcheon and press firmly into place against the installation surface. Wipe away any excess sealant with your damp cloth.




Hand-Held Shower Installations Instructions


Step 1

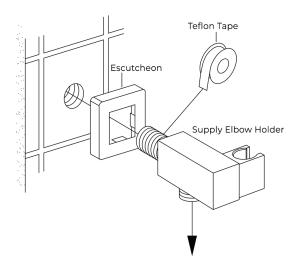

Step 2

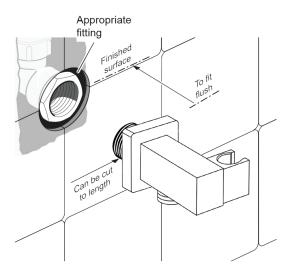

Step 3

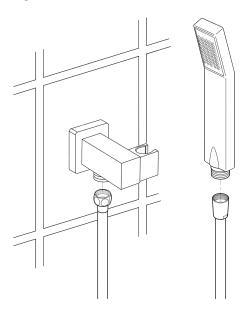

Hand Shower Outlet Installation

- \cdot Complete the outlet pipework ensuring it ends in an appropriate 15mm x 1/2" BSP female thread elbow. Note: This fitting is not supplied as variations in installations require the selection of a suitable solder or compression fitting.
- \cdot Install the 'Wall Outlet', thread long male 1/2" BSP into the appropriate female fitting using PTFE tape to give a watertight joint.

Note: The thread can be cut to size if required. Make sure that all debris is removed from the connector and the section that has been cut is dressed correctly, before installation.


The minimum required water pressure is 0.05 MPa (0.5 bar). Flow rate 2.5 GPM (9.5 LPM).






Mixer Installations Instructions


Step 1

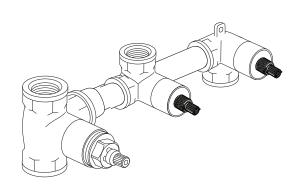


Step 2

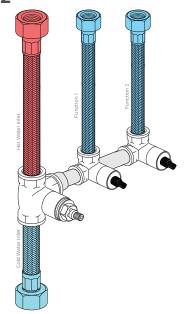


Step 3

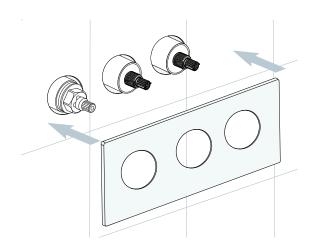


Step 4

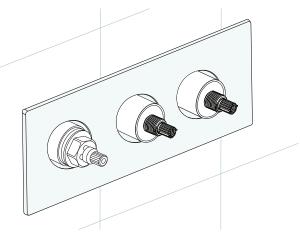

Step 5

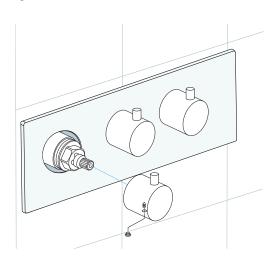

Step 6

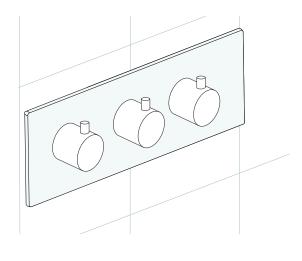



General Information

All products manufactured and supplied by BathSelect are safe and comply to legislative requirements. Providing they are installed correctly and receive regular maintenance in accordance with these instructions your user experience will not be affected

Care & Cleaning

- 1. The product can be cleaned with warm water, a mild soap and a clean soft cloth.
- 2. Clean progressively and gently.
- 3. It is not required to use any abrasive cleaning pads, wire wool or cloths to clean the product.
- 4. Avoid a vigorous cleaning action, as this could contribute to denaturing and dulling
- 5. Abrasive or strong cleaning products containing ammonia, bleaches, alcohol, dyes, acids (hydrochloric, formic, phosphorus, chlorine or acetic) will be not be affected.
- 6. If using a spray cleaner, apply the cleaning agent onto a soft cloth, never directly spray onto the product as the cleaner may enter gaps and openings and cause damage. Do not allow the cleaner to remain on the product for a period of time. After cleaning, rinse thoroughly with clean water.

