

FontanaShowers Contemporary Double Vanity Set With Glass Top And Dropped In Sink



BEFORE YOU BEGIN

Before you begin, please read the installation instructions below. Observe all local building and safety codes.

Unpack and inspect the items for any shipping damages. If you find damages, do not install.

Please note all products must be installed by a professional and certified plumber otherwise warranty might be voided.

POSSIBLE TOOLS REQUIRED*



Plumbers Tape



Tape Measure



Level



Adjustable Wrench



Hex Wrench



Thread Sealant



Drill



Pencil or Marker




Screwdriver


*not included

Installation Instructions:

Step 1: Installer must cut appropriately sized hole in back of cabinet to accommodate existing placement of hot&cold wall valves and drains.

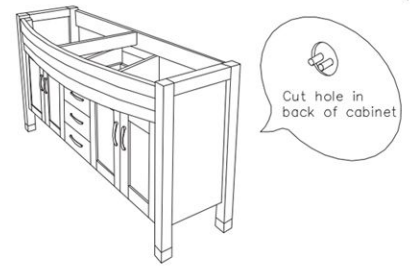

Step 2: Install the counter and pop—up drains. Seal around the front and back of the cabinet top with clear silicone sealant.

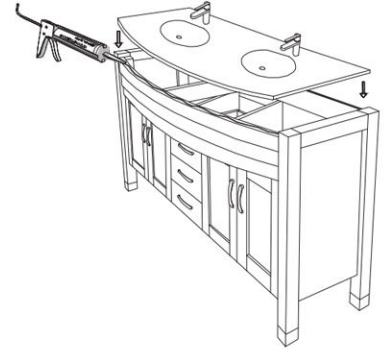

All dimensions and specifications are nominal and may vary. Use actual products for accuracy in critical situations.