BATHSELECT TALL CONTEMPORARY AUTOMATIC COM-MERCIAL SOAP DISPENSER | TOUCHLESS| MOTION SENSOR | HANDS-FREE INSTALLATION INSTRUCTIONS




PRIOR TO INSTALLATION

Please read installation instructions below. All plumbing should be installed in accordance with applicable building codes and regulations.

Unpack and inspect the items for any shipping damages. If you find damages, do not install.

All products must be installed by a professional and certified plumber otherwise warranty may be voided.

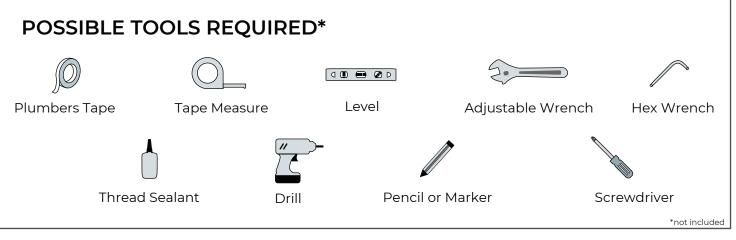


1


BathSelect -

Specification	
Product Type:	Commercial
Main Construction Material:	Brass
Mount Type:	Deck
Handle Type:	Infra-Red
Power supply :	6V battery/6V DC mains connection
Batteries Required:	4 AA Batteries (not supplied)
Number of Tap Holes:	1
Valve/Cartridge Type:	Solenoid Valve
Plumbing System Requirements:	Suitable for all plumbing systems
Perception range:	120mm
Activation Time:	0.5 - 1 secs
Soap viscosity:	100~3800 cps
Pump unit:	included and must be installed to wall

Faucet Size

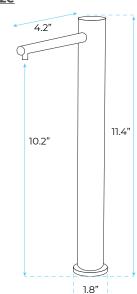



Faucet Deck Mount Installation

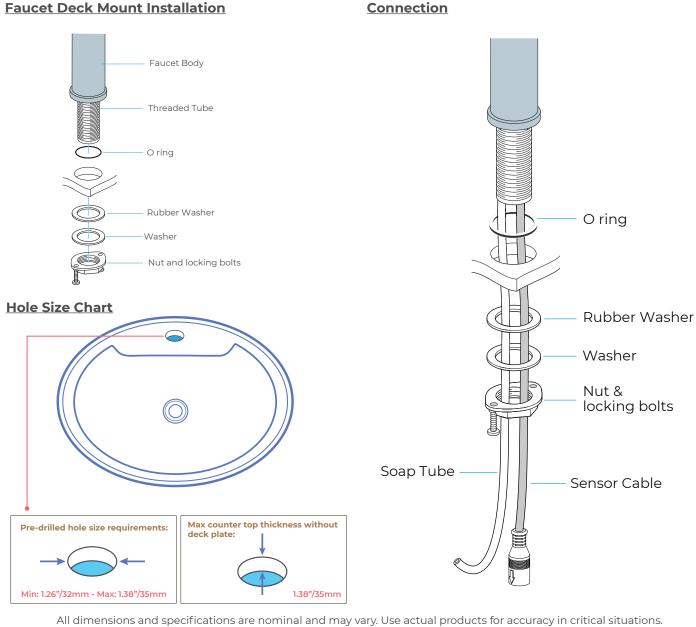


BathSelect

BathSelect -




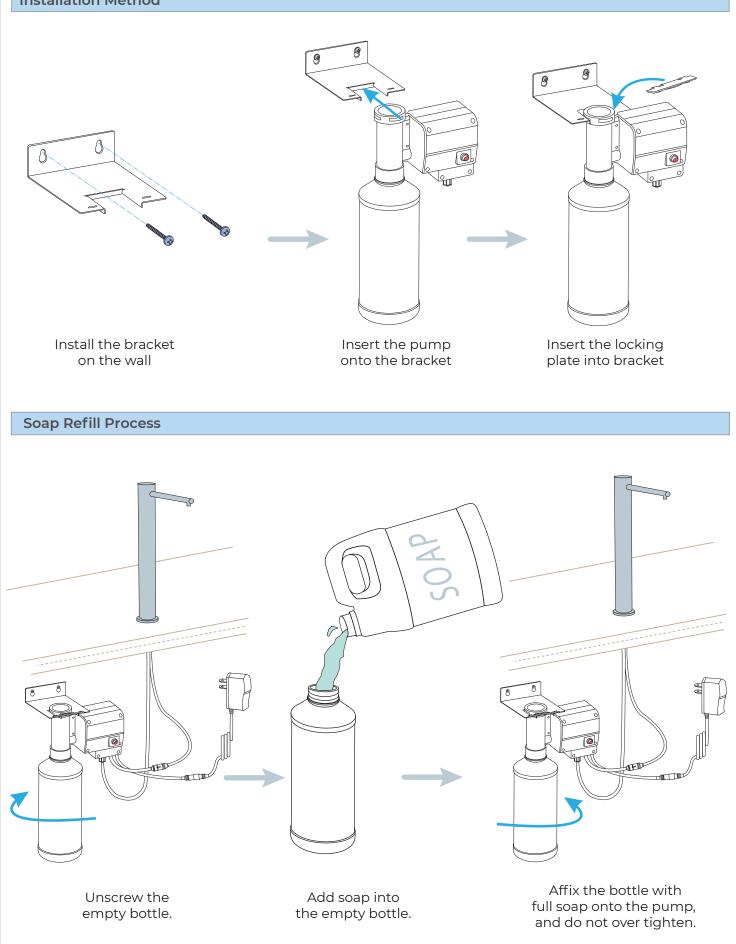

BathSelect -

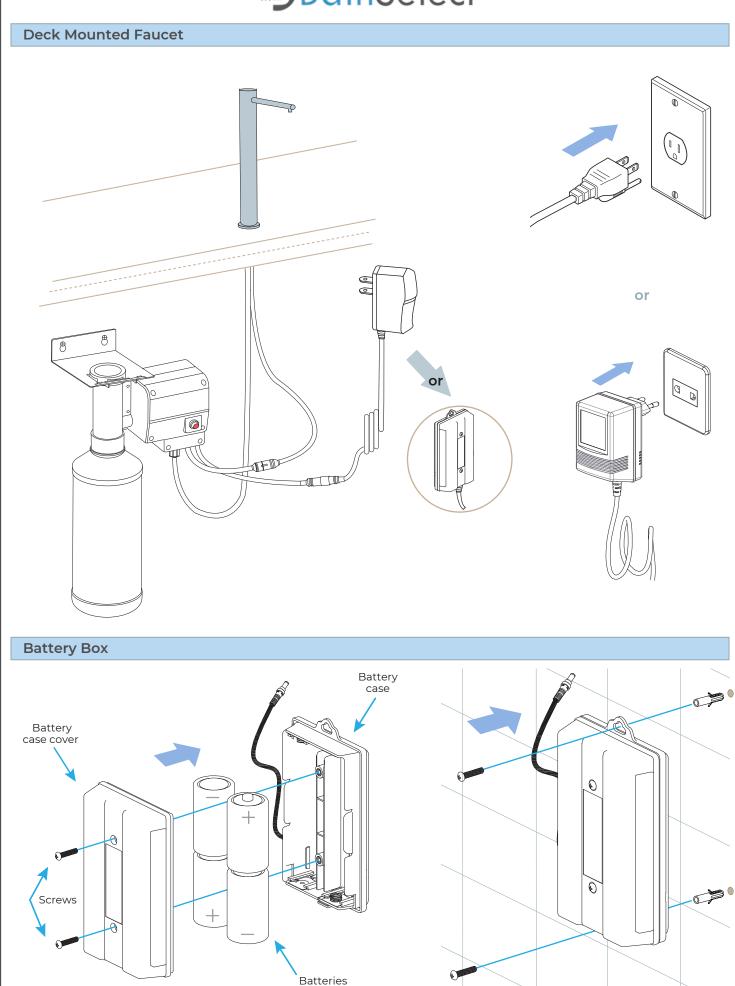

BathSelect

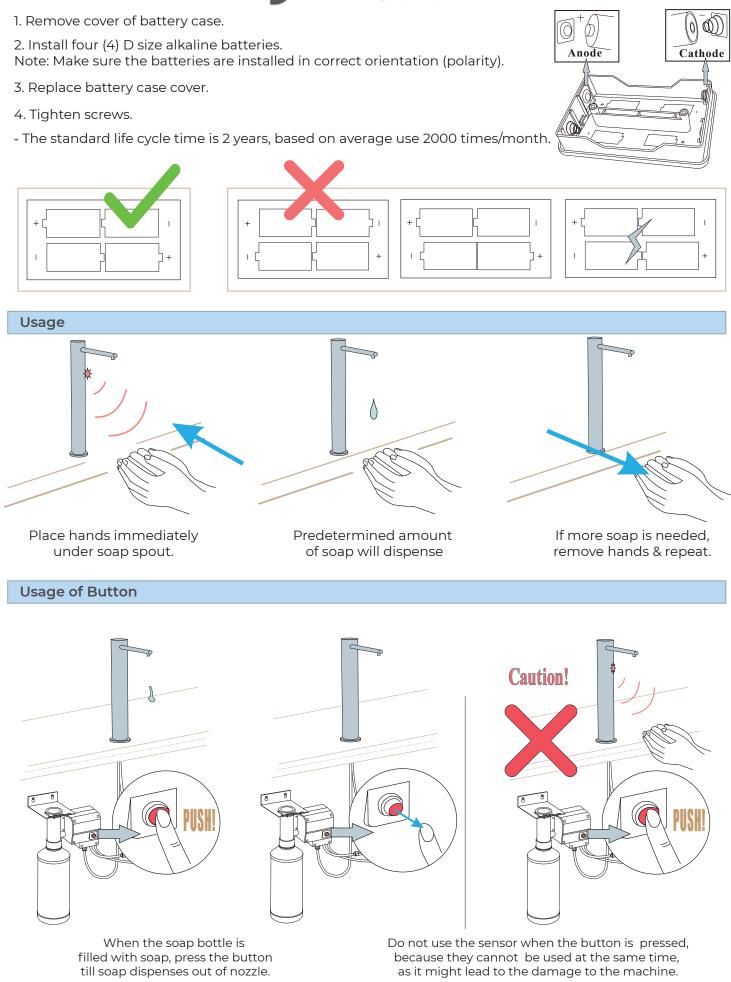

BathSelect

Commissioning Sequence

Before using the soap dispenser for the first time the following sequence must be carried out. Fill the bottle full of soap.

Locate the dispense button on the side of the pump. Press and hold the button until soap is dispensed from the spout. This will ensure the dispenser tube and cable are full of soap.

Operation


Place the hands under the spout within the sensing range.

Once the users' hands have been detected a small amount of soap will be dispensed from the spout into the users' hands.

General Information

Our sensor spouts have a non-touch control which uses infrared sensing technology to detect human presence. Once detected, the spout instantly dispenses water and automatically stops once the user moves their hands away to eliminate unnecessary water wastage, whilst creating a more hygienic washroom solution.

All products manufactured and supplied by BathSelect are safe and comply to legislative requirements. Providing they are installed correctly and receive regular maintenance in accordance with these instructions your user experience will not be affected.

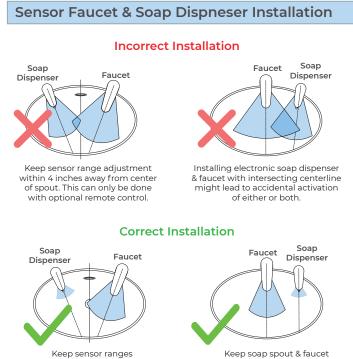

Keep soap spout & faucet centerlin parallel.

Care & Cleaning

· Wipe away any debris adhering to the spout or sensor.

• Wipe away debris with a damp cloth containing a suitable amount of a neutral, dishwashing detergent. Then wipe clean with a damp cloth.

• When cleaning around the sensor, please be careful not to scratch the surface of the sensor window


· Do not use detergent that might damage the surface of spout. These include:

· Detergents containing acid, chlorine bleach or alkali.

• Detergents that are coarse granules in nature, such as polishing powder.

· Solvents such as paint thinner or benzene.

· Abrasive aids such as nylon scrubbers/brushes, steel wool. etc.

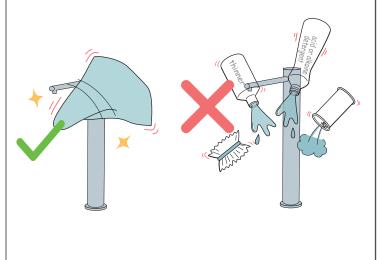

Hygienic

The proximity sensor removes the need to touch the spout body, reducing the spread of germs and reducing the chance of cross infection.

factory preset.