MELUN ROSE GOLD HIGH QUALITY COMMERCIAL SOAP DISPENSER INSTALLATION INSTRUCTIONS




BEFORE YOU BEGIN

Before you begin, please read the installation instructions below. Observe all local building and safety codes.

Unpack and inspect the items for any shipping damages. If you find damages, do not install.

Please note all products must be installed by a professional and certified plumber otherwise warranty might be voided.

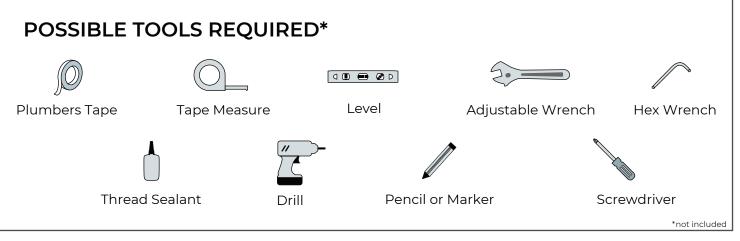

BathSelect

BathSelect

<u>Size</u>


2.5"

3.3"

Q

4.6"


Specification	
Product Type:	Commercial
Main Construction Material:	Brass
Mount Type:	Deck
Handle Type:	Infra-Red
Power:	Battery box for 6 x 1.5 V D alkaline batteries
Power Source:	12 V transformer
Number of Tap Holes:	1
Valve/Cartridge Type:	Solenoid Valve
Sensing Range:	Adjustable with optional remote control
Working Soap:	Standard liquid Soap
Soap Bottle Capacity:	800ML
Viscosity of Liquid Soap:	0.5ML to 1.5ML, adjustable
Soap Amount Per Use:	No

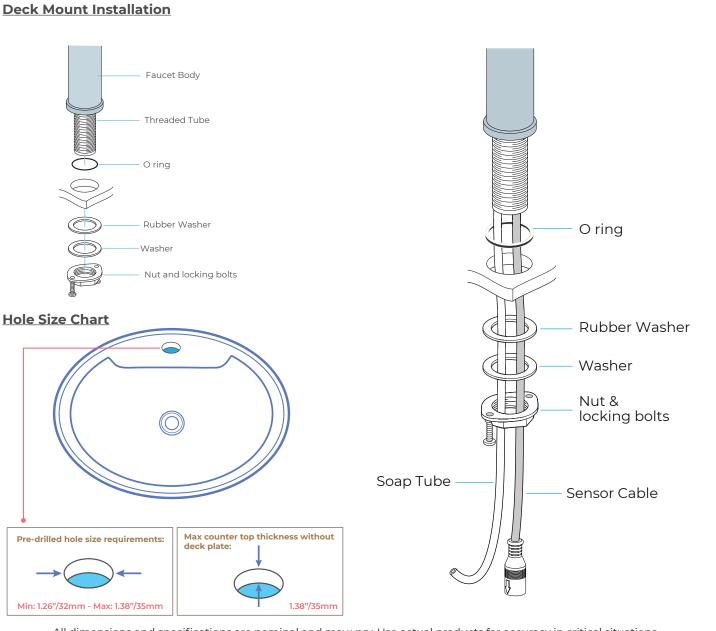

All dimensions and specifications are nominal and may vary. Use actual products for accuracy in critical situations.

BathSelect -




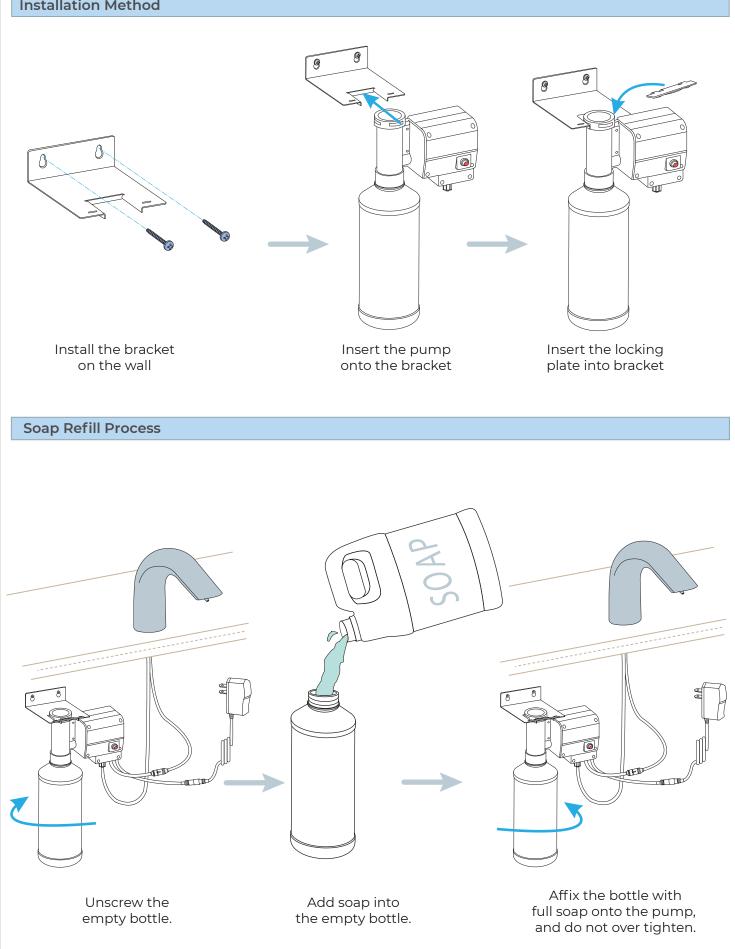

BathSelect -

Deck Mounted Faucet C ē or ₿ ₿ or B Ø 0 2 TED **Battery Box** Battery case 0 Battery case cover 0 Õ 0 Screws +Batteries

BathSelect

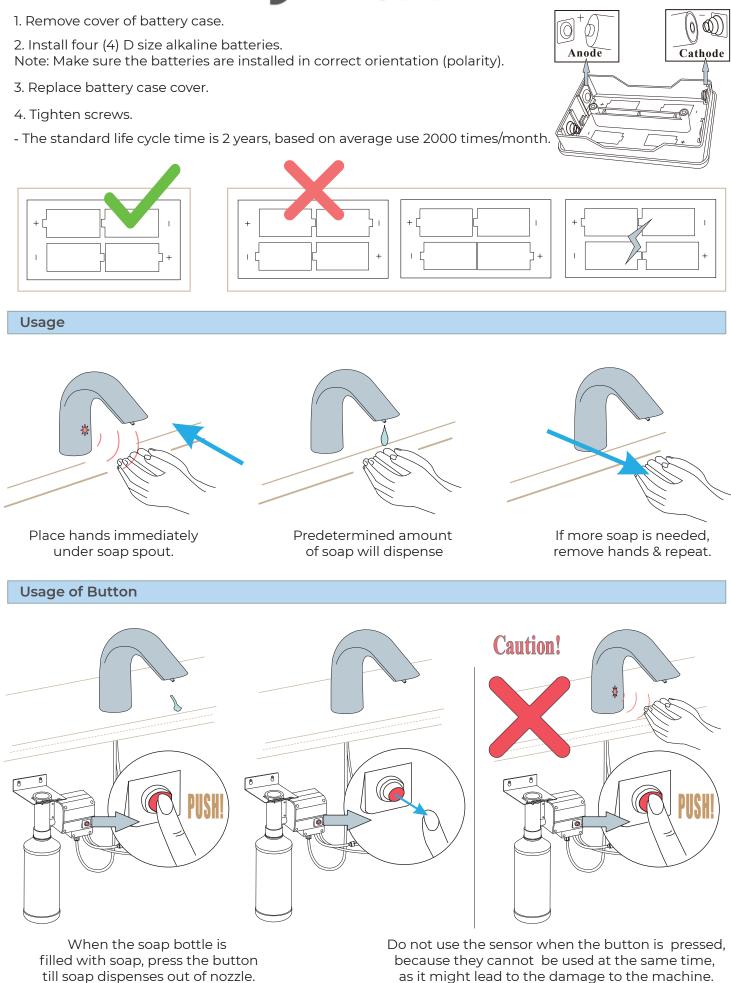

BathSelect

Commissioning Sequence

Before using the soap dispenser for the first time the following sequence must be carried out. Fill the bottle full of soap.

Locate the dispense button on the side of the pump. Press and hold the button until soap is dispensed from the spout. This will ensure the dispenser tube and cable are full of soap.

Operation

Place the hands under the spout within the sensing range.

Once the users' hands have been detected a small amount of soap will be dispensed from the spout into the users' hands.


General Information

Our sensor spouts have a non-touch control which uses infrared sensing technology to detect human presence. Once detected, the spout instantly dispenses water and automatically stops once the user moves their hands away to eliminate unnecessary water wastage, whilst creating a more hygienic washroom solution.

All products manufactured and supplied by BathSelect are safe and comply to legislative requirements. Providing they are installed correctly and receive regular maintenance in accordance with these instructions your user experience will not be affected.



Incorrect Installation

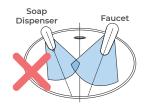

Keep sensor range adjustment within 4 inches away from center

of spout. This can only be done

with optional remote control.

Faucet Soap Dispenser

Installing electronic soap dispenser & faucet with intersecting centerline might lead to accidental activation of either or both.

Correct Installation





Care & Cleaning

• Wipe away any debris adhering to the spout or sensor.

• Wipe away debris with a damp cloth containing a suitable amount of a neutral, dishwashing detergent. Then wipe clean with a damp cloth.

 \cdot When cleaning around the sensor, please be careful not to scratch the surface of the sensor window.


• Do not use detergent that might damage the surface of spout. These include:

 \cdot Detergents containing acid, chlorine bleach or alkali.

• Detergents that are coarse granules in nature, such as polishing powder.

• Solvents such as paint thinner or benzene.

 \cdot Abrasive aids such as nylon scrubbers/brushes, steel wool, etc.

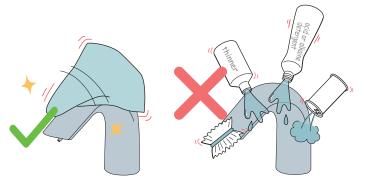

Hygienic

The proximity sensor removes the need to touch the spout body, reducing the spread of germs and reducing the chance of cross infection.

For more details, visit the product page:

